


## Shallow Blaster Installation Guide

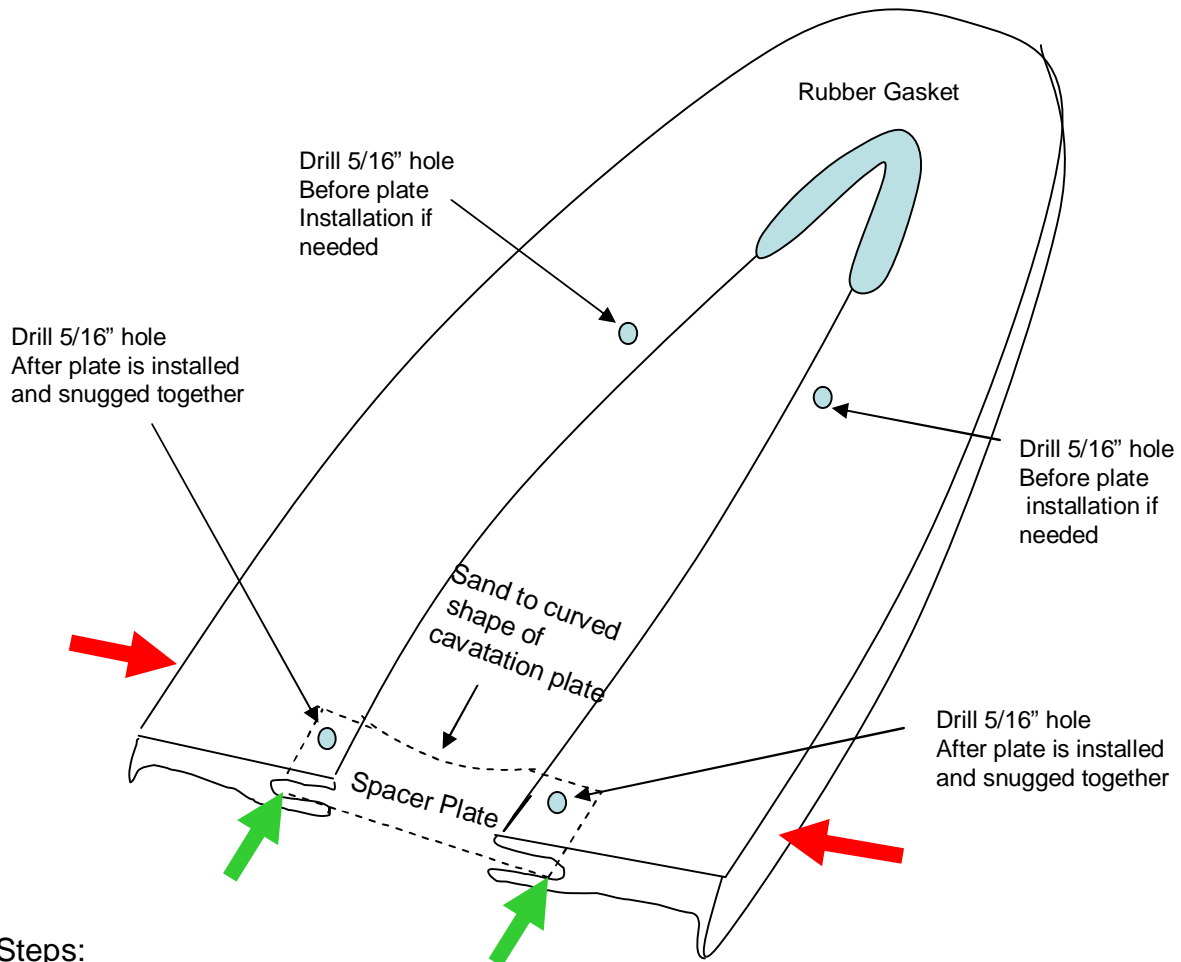

### Steps:

1. Drill two 5/16" holes at upper location towards rubber gasket. (dimples in plate exist)  
Note--Not all motors require that these be installed, ask the dealer for your application.
2. Tilt motor to allow the blaster to be slide in place along the cavitation plate.
3. Use a board between the front edge of the blaster and the trailer or hull to help get a snug fit while trimming the motor back down. (Use extra caution to not damage the blaster or the hull)
4. Once the blaster is in place, use a clamping tool placed across the Red Arrows section to pull the back end of the plate into a snug fit. (Don't over squeeze plate, can cause the lower edge to crack )
5. Measure the distance between the Green Arrows to prepare the space plate installation. There usually is enough spacer plate left for a second installation.  
You may want to sand a curve to match the shape of the motors cavitation plate.
6. Now you can drill the 5/16" holes through the blaster and the spacer plate, being sure not to drill into the motors cavation plate.
7. Install the screws, remove the holding clamp and your complete.

**Important:** Since this is not being installed by a dealer, no warranty is applicable for the shallow blaster. Item is sold on an "AS IS" basis. Installer assumes all responsibilities.

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.